

'06 **FX**

Quick Reference Guide



INFINITI.

QUICK REFERENCE GUIDE

Introduction

This easy-to-use Quick Reference Guide is intended to provide you with a user-friendly learning experience to quickly acquaint you with your new Infiniti.

- The Quick Reference Guide will help you to more fully appreciate your vehicle's superior features, unique functions and advanced technology.
- Refer to the Quick Reference guide to learn how to personalize your vehicle's controls and equipment to maximize your driving comfort and convenience.

However, this guide is not intended as a substitute for your vehicle's Owner's Manual. For comprehensive product and vehicle safety information, please refer to your Owner's Manual. It will help you to better understand the operation and proper maintenance of your new Infiniti vehicle.

Both Infiniti and your Infiniti dealer are dedicated to serving all your automotive needs. Your complete satisfaction is our primary concern. It is suggested that you read this Quick Reference Guide and your vehicle's Owner's Manual thoroughly before contacting your Infiniti dealer with related questions.



contents

	Page
GETTING STARTED	
Remote Keyless Entry System (Keyfob)	1
Intelligent Key System	1
KeyFob and Intelligent Key Features	2
Locks, Child Safety Rear Door	3
Seats, Front Power Adjustment	3
Door, Fuel-Filler – Opening	4
Memory System, Driver’s Seat/Steering/Outside Mirrors	4
Vehicle Control Center	5
Infiniti Controller	5
Screen, Dash-Mounted Center Display	6
Buttons Surrounding Infiniti Controller	6
Controls, Steering Wheel – Bluetooth®/Audio	8
Controls, Steering Wheel – Audio	9
HomeLink® Universal Transceiver	10
Mirror, Inside (Rear View) – Anti-Glare/Compass	10
Mirror, Outside (Side View) – Power Adjust	10
Instrument Panel Layout	11
Light, Air Bag Status – Front-Passenger	12
DRIVING CONTROLS	
Cruise Control	13
Cruise Control, Intelligent (ICC)	13
Headlights	15
Wipers, Front and Rear	16
All Wheel Drive, ATTESA E-TS™	17
Switch, Snow Mode ON/OFF	17
Lane Departure Warning (LDW)	17
Monitor, Rear View	18
COMFORT	
Heater and Air Conditioner (Dual-Zone Automatic Temperature Control)	19
Defroster, Front and Rear	20
MEDIA CENTER	
Audio System, Bose®	21
Radio Presets, How to Customize	23
Tone Settings, How to Customize	23
Special Features	23
Entertainment System, Infiniti CD/DVD Mobile	24
Phone System, Bluetooth® Hands-Free	25
NAVIGATION	
Infiniti Navigation System	27
Address Book, Storing Addresses	28
Address Book, Deleting Entries	28
Voice Guidance ON/OFF	28
Where Am I?	29
Store Current Location	29
Programming A Destination: Street Address	29
Programming A Destination: Points of Interest	30
Programming A Destination: Nearby Places	30
Deleting a Route	30
CONVENIENCE	
Armrest/Center Console, Front	31
12-Volt Power Outlets	31
Lift Gate, Open/Close	31
Cover, Spare Tire	32
Seat Belt, Rear, Center – Selecting	32
Seat Belt, Rear, Center – Storage	32
Seat, Rear – Adjustment	32
Seats, Rear – Fold Down	32



REMOTE KEYLESS ENTRY SYSTEM (KEYFOB)

(if so equipped)

Refer to section 3 in your Owner's Manual for more details about this feature.

The Remote Keyless Entry system (Keyfob) allows you to lock and unlock all doors (including the lift gate), open and close the front windows, and activate a panic alarm—all from outside the vehicle.

INTELLIGENT KEY SYSTEM (if so equipped)

Refer to section 3 in your Owner's Manual for more details about this feature.

Similar to the Remote Keyless Entry system, the Intelligent Key system also lets you lock and unlock all doors (including the lift gate), open and close the front windows, and activate a panic alarm from outside your vehicle. What makes these systems differ is the ability to perform some of these functions—as well as start and stop the engine—without having to remove the Intelligent Key from your pocket or bag.



Several vehicle features can be tied to a specific Intelligent Key. Attached to your Intelligent Keys are color-coded key ring clips which conveniently distinguish one driver's Intelligent Key from another.

KEYFOB AND INTELLIGENT KEY

The Keyfob and Intelligent Key will operate up to approximately 33 feet from the vehicle.

LOCK Button
Press once to lock all doors (including the lift gate) and fuel-filler door.

PANIC ALARM Button
Press and hold down for more than 1 second to sound the horn and flash the headlights.
Press any button on the Keyfob or Intelligent Key to stop the panic alarm.

UNLOCK Button
Press once to unlock the driver's door and fuel-filler door.
Press again within 5 seconds to unlock all other doors (including the lift gate).
Press and hold down to open the front windows

REMOTE KEYLESS ENTRY SYSTEM (KEYFOB) FEATURES


AUTO UNLOCK FUNCTION

This feature helps to prevent accidentally locking the key in the car. It will not allow the doors to lock if the key is still in the ignition switch, **OFF** position.

getting started

INTELLIGENT KEY SYSTEM FEATURES

STARTING THE ENGINE

Push **IN** the ignition switch/knob, and confirm the Intelligent Key Warning Light (located in the top center area of the Instrument Cluster) is illuminated green . Then, turn the ignition switch/knob to start the engine.



LOCK/UNLOCK OPERATION – DRIVER AND FRONT-PASSENGER DOOR HANDLE REQUEST SWITCHES

- **Locking Doors** – Push any door handle Request Switch **once**.
- **Unlocking Doors** – Push any door handle Request Switch **once**. The corresponding door will unlock. Push the door handle Request Switch again within 5 seconds to unlock all other doors (including the fuel-filler door and lift gate).



Note: When the driver's door handle Request Switch is pressed once to unlock the door, the fuel-filler door will also unlock.

OUTSIDE BUZZER AND LOCKOUT PROTECTION

If you attempt to exit the vehicle and lock the doors with either front door handle Request Switch while the Intelligent Key is inside the vehicle, a rapid beep tone will sound and the doors will not lock.

REMOTE KEYLESS ENTRY SYSTEM (KEYFOB) & INTELLIGENT KEY SYSTEM SHARED FEATURES OPENING FRONT WINDOWS WITH THE KEYFOB/INTELLIGENT KEY

Press and hold down the **UNLOCK** button for more than 3 seconds, and continue pressing until the windows are completely open.

ACTIVATING/DEACTIVATING THE HORN BEEP FEATURE

You may program your Keyfob/Intelligent Key to sound the horn when locking the vehicle.

To activate: Press and **hold** down the **LOCK** and **UNLOCK** buttons together for at least 2 seconds. The hazard indicators **will** flash once and the horn **will** chirp once to confirm the operation is complete.

To deactivate: Again, press and **hold** down the **LOCK** and **UNLOCK** buttons together for at least 2 seconds. The hazard indicators **will** flash three times to confirm the operation is complete.

AUTO RE-LOCK FUNCTION

When the doors are unlocked with the door handle Request Switch or the **UNLOCK** button on the Keyfob/Intelligent Key, for security, after one minute all doors will automatically re-lock unless the following occurs:

- Any door is opened.
- The ignition switch/knob is turned to the **ON** position.

Notes:

- The time for the Auto Re-Lock function can be modified or turned **OFF**. To adjust the setting: Press the **SETTING** button and highlight **Vehicle Electronic Systems** on the center Display Screen, then press ENTER. Highlight **Auto Re-Lock Time**, then press ENTER. Use the Infiniti Controller to adjust the time to your preference. Press ENTER to set the new Auto Re-Lock Time. Refer to section 4 in your Owner's Manual for more details about this feature.
- Close proximity of a cell phone to the Intelligent Key may interfere with the Lock/Unlock logic.

OPENING/CLOSING FRONT WINDOWS AND LOCKING/UNLOCKING DOORS WITH EMERGENCY OR WALLET KEYS

Refer to section 3 in your Owner's Manual for more details about this feature.

Turn the driver's door key lock with the following keys to lock and unlock the doors and open and close the front windows while you are outside of the vehicle.

For Intelligent Key System:

Wallet Key

Valet Key

Mechanical Key(s)



For Remote Keyless Entry System (Keyfob):

Wallet Key

Valet Key

Master Key(s)



CHILD SAFETY REAR DOOR LOCK

Refer to section 1 in your Owner's Manual for more details about this feature.

- The safety lock levers are located on the inside edge of the rear doors.
- When the lever is in **LOCK** position, the door can be opened only from the outside. If you cannot open a rear door from the inside, check the child safety lock lever.



SEAT SWITCHES, FRONT POWER ADJUSTMENT

Refer to section 1 in your Owner's Manual for more details about this feature.

10-way Power Driver's Seat including Power Lumbar Adjustment

8-way Power Front-Passenger's Seat



getting started

OPENING FUEL-FILLER DOOR

Refer to section 3 in your Owner's Manual for more details about this feature.

To open the fuel-filler door:

- 1 Unlock the doors with the Keyfob/Intelligent Key or power door lock switch.
- 2 Then, push in on the left-hand side (9 o'clock position) of the fuel-filler door.



Note: **YOU MUST** use the Keyfob/Intelligent Key or power door lock switch to unlock the fuel-filler door. If the driver or front-passenger uses the inside door lock knob to unlock and exit the vehicle, the fuel-filler door will remain **LOCKED** and will not open as noted above.

FUEL-FILLER CAP HOLDER

When you are refueling, place the fuel-filler cap in the fuel-filler cap holder.



MEMORY SYSTEM – DRIVER'S SEAT, STEERING & OUTSIDE MIRRORS (AUTOMATIC DRIVE POSITIONER)

Refer to section 3 in your Owner's Manual for more details about this feature.

With the transmission in **P (PARK)**, the Memory system can automatically:

- Move the driver's seat **BACKWARD** and the steering wheel **UP** to ease entering and exiting the vehicle (**Entry/Exit Assist feature**).
- Adjust the driver's seat, steering column, and outside mirrors to two separate memorized positions.



Located on Driver's Door

These features can be turned **ON** or **OFF**. To adjust the settings: Press the **SETTING** button and highlight **Vehicle Electronic Systems** on the center Display Screen, then press **ENTER**. Highlight **Adjust Driver Seat When Exiting Vehicle** and/or **Lift Steering Wheel When Exiting Vehicle**, and press **ENTER** to turn features **ON** or **OFF**.

To Set Customized Seat, Steering, and Mirror Position Memory:

- 1 Turn the ignition switch/knob **ON**. Keep the transmission in **P (PARK)**.
- 2 Adjust the seat, steering wheel, and outside mirrors to the desired positions.
- 3 Press the **SET** button. The indicator lights on both **Memory button 1** and **2** will illuminate.
- 4 **Within 5 seconds**, press **Memory button 1** or **2** and **hold down** for at least 1 second. The indicator light on the **Memory button** you select will blink **ON** and **OFF** one time and then illuminate solid amber for approximately 5 seconds. Seat/steering/mirror memory is now set to your preference.
- 5 **Link the seat/steering/mirror memory to your Keyfob/Intelligent Key.** While the indicator light on the **Memory button** is illuminated (see step 4, above) press the **UNLOCK** button on your Keyfob/Intelligent Key. The indicator light on the **Memory button** chosen will blink **ON** and **OFF** approximately 10 times. The memory positions are now matched to the Keyfob/Intelligent Key. You may set the second seat/steering/mirror memory positions to your other Keyfob/Intelligent Key by repeating the steps above.

Note: **Always perform step 5 when setting seat, steering and mirror memory.** If you **DO NOT** link memory to your Keyfob/Intelligent Key, whenever you unlock the vehicle with your Keyfob/Intelligent Key, the seat, steering column, and mirrors will move to the last position set.



Vehicle with the Infiniti Navigation System shown.



Vehicle without the Infiniti Navigation System shown.

VEHICLE CONTROL CENTER

Refer to section 4 in your Owner's Manual for more details about this feature.

The following buttons and controls are used together to operate most functions displayed on your vehicle's center Display Screen:

- Infiniti Controller
- Buttons and controls surrounding the Infiniti Controller

HEATER AND AIR CONDITIONER CONTROLS – see page 19

AUDIO SYSTEM CONTROLS – see page 21

INFINITI CONTROLLER

Refer to section 4 in your Owner's Manual for more details about this feature.

Buttons located on the Infiniti Controller serve various purposes for navigating around the center Display Screen and choosing options. As you use the vehicle controls, you will find the control combination that best suits your needs.

1 Center Dial

Turn the Center Dial to navigate **UP**, **DOWN**, and **ACROSS** the center Display Screen, highlight items for additional information, and to make changes to settings.

2 Main Directional Buttons

Four Main Directional buttons (marked with arrows) on the face of the Infiniti Controller can also be used to perform the same functions as the Center Dial, above.

3 Additional Directional Buttons (for vehicles with the Infiniti Navigation system)

Four additional buttons, marked with small “dashes” are located between the Main Directional buttons. When using the Navigation system for instance, these buttons can be used in different ways to make “fine-tuned” movements around the Navigation Map screen.

4 ENTER Buttons


When you use the Center Dial or Main Directional buttons to highlight a menu item, the text will display in **yellow**. Press either of the ENTER buttons to select the highlighted item.

5 BACK (Previous) Button

Press to return to the previous function shown on the center Display Screen, and to delete characters when using the on-screen keyboard.

6 VOICE Button (for vehicles with the Infiniti Navigation system)

Press to hear the next Navigation instruction. See the Navigation section of this guide (beginning on page 27) for more detailed Navigation system information.

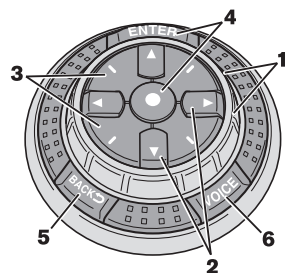


getting started

DASH-MOUNTED CENTER DISPLAY SCREEN

Refer to sections 4 in your Owner's Manual and the separate 2006 Infiniti Navigation System Owner's Manual for more details about this feature.

Several vehicle functions are viewed on the center Display Screen in menus. Whenever a menu selection is made or menu item is highlighted, different areas on the screen may provide you with important information.

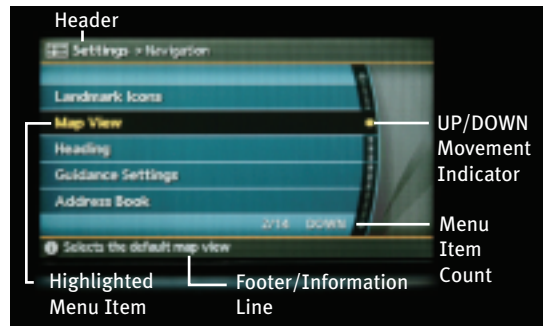

Vehicle with the Infiniti Navigation System shown.

BUTTONS SURROUNDING THE INFINITI CONTROLLER

E/M Button (for vehicles **without** the Infiniti Navigation system)

Press to change certain center Display Screen readouts (e.g. Heater and Air Conditioner temperature, Fuel Economy, Trip 1 and 2, etc.) from English/US to Metric (e.g. English/US = Mile, ° Fahrenheit, MPG; Metric = km, ° Celsius, L/100 km).

Notes:

- Center Display Screen readouts can also be changed as follows: Press the **SETTING** button and highlight **System Settings** on the center Display Screen, then press ENTER. Highlight **Language/Unit**, then press ENTER. Highlight **Unit**, and press ENTER to choose between **English/US** or **Metric**. For vehicles equipped with the Navigation system, this is the **ONLY** way that readouts can be changed.
- If **Return All Settings to Default** is chosen, the **Unit** setting **does not default to either English/US or Metric**. Therefore, in order to switch the **Unit** setting, you must again perform the procedure described above.

 
DEST Button (for vehicles **with** the Infiniti Navigation System)

Press to set a destination in the Navigation system. See the Navigation section of this guide (beginning on page 27) for more detailed Navigation system information.



MAP Button (for vehicles **with** the Infiniti Navigation system)

Press to display the Map screen.



TRIP Button

Press and **quickly release** to view Trip Computer information (Elapsed Time, Driving Distance, and Average Speed) for two distinct vehicle trip logs (Trip 1 and Trip 2), and additional information, if available (see "Notes" below).



Notes:

- For vehicles **with** the Infiniti Navigation system, pressing this button multiple times will display: Warning Message (if any exists), Trip 1, Trip 2, Fuel Economy, Maintenance (including Tire Pressure Monitor system).
- For vehicles **without** the Infiniti Navigation system, pressing this button multiple times will display: Trip 1, Trip 2, Trip OFF.

Press and **hold** down the TRIP button for approximately 2 seconds to quickly reset the information currently shown on the center Display Screen.

TRIP RESET Button (for vehicles **without** the Infiniti Navigation system)

In addition to pressing and holding the TRIP button, you can press and **hold** down the TRIP RESET button for approximately 2 seconds to quickly reset a trip log's Elapsed Time, Driving Distance, and Average Speed to zero.



ROUTE Button (for vehicles **with** the Infiniti Navigation system)

Press to display Route related information and settings. See the Navigation section of this guide (beginning on page 27) for more detailed Navigation system information.



FUEL ECON Button (for vehicles **without** the Infiniti Navigation system)

Provides Average Fuel Economy, a Fuel Economy visual gauge, and Distance to Empty. To quickly reset the fuel economy data back to zero, press and **hold** down the TRIP RESET button for approximately 2 seconds.



DAY/NIGHT Button

- Quickly press twice to switch the center Display Screen between **day view** and **night view**. Or, within approximately 10 seconds of pressing, you can adjust the center Display Screen brightness **UP** or **DOWN** by turning the Infiniti Controller Center Dial or pressing the Left/Right Main Directional buttons.
- Press and **hold** down to turn the display **OFF** entirely.
- To resume display, press the **SETTING** button and highlight **Display**, then press ENTER. Highlight **Display Off**, then press ENTER. The indicator light will go out.
- Press the **BACK** button two times to return to the main display screen.



MAINT (Maintenance) Button (for vehicles **without** the Infiniti Navigation system)

Press to display and set vehicle maintenance information (e.g. Engine Oil, Tire Rotation, Tire Pressure, etc.).



SETTING Button

Press to display the Settings Menu.



getting started

STEERING WHEEL CONTROLS

BLUETOOTH® HANDS-FREE PHONE SYSTEM/AUDIO CONTROLS

(if so equipped)

Refer to section 4 in your Owner's Manual for more details about this feature.

1 VOL (Volume) Control Switch

2 PHONE/SEND Button

If a Bluetooth® -enabled cellular phone has been paired to the vehicle and is selected, press this button to:

- initiate a Bluetooth® Voice Recognition session
- answer an incoming call
- skip through system feedback
- enter commands during a call.

Refer to section 4, "List of Voice Commands" and "During a call" in your Owner's Manual and www.infiniti.com/bluetooth for more details about this feature.

3 PHONE/END button

- Press at any time during a Bluetooth® Voice Recognition session to cancel the session and/or end a call.

MODE button

- Press to change between radio preset banks A, B, and C; and CD.

4 ^SEEK^ (Tuning) Switch

For Radio:

- Push the switch **UP** or **DOWN** for **less than** 1.5 seconds to page through the radio preset stations on the bank (A, B, or C) currently selected.
- Push the switch **UP** or **DOWN** for **more than** 1.5 seconds to seek the next or previous radio station on the band (AM, FM) or music category (SAT, if Satellite Radio is installed and activated) currently selected.

For Audio CDs and CDs with MP3/WMA:

- Push the switch **UP** or **DOWN** for **less than** 1.5 seconds to return to the beginning of the current track/folder/file or skip to the next track/folder/file. Push several times to skip **BACKWARD** or **FORWARD** through multiple tracks/folders/files.
- Push the switch **UP** or **DOWN** for **more than** 1.5 seconds to change to the next CD in the CD Changer (audio CD) or next folder on the CD (CD with MP3/WMA).



AUDIO CONTROLS

(if so equipped)

Refer to section 4 in your Owner's Manual for more details about this feature.

1 VOL (Volume) Control Switch

2 MODE button

- Press to change between radio preset banks A, B, and C; and CD.

3 Power ON/OFF Button

- Turns Audio System ON/OFF.

4 \wedge SEEK \vee (Tuning) Switch

For Radio:

- Push the switch **UP** or **DOWN** for **less than 1.5 seconds** to page through the radio preset stations on the bank (A, B, or C) currently selected.
- Push the switch **UP** or **DOWN** for **more than 1.5 seconds** to seek the next or previous radio station on the band (AM, FM) or music category (SAT, if Satellite Radio is installed and activated) currently selected.

For Audio CDs and CDs with MP3/WMA:

- Push the switch **UP** or **DOWN** for **less than 1.5 seconds** to return to the beginning of the current track/folder/file or skip to the next track/folder/file. Push several times to skip **BACKWARD** or **FORWARD** through multiple tracks/folders/files.
- Push the switch **UP** or **DOWN** for **more than 1.5 seconds** to change to the next CD in the CD Changer (audio CD) or next folder on the CD (CD with MP3/WMA).



CRUISE CONTROL OR INTELLIGENT CRUISE CONTROL (ICC) SWITCHES

(if so equipped)

See the **DRIVING CONTROLS** section for more details about this feature.




Intelligent Cruise Control (ICC)



Cruise Control

getting started

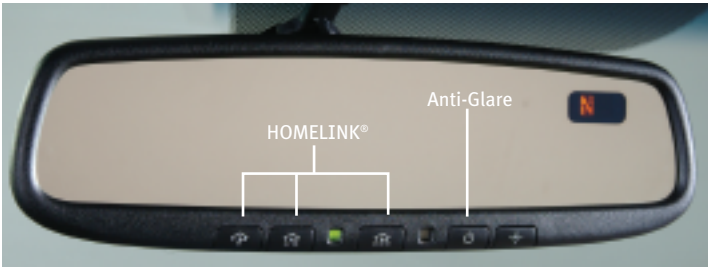

HOMELINK® UNIVERSAL TRANSCEIVER

(if so equipped)

Refer to the program card located in the owner's literature portfolio and section 2 in your Owner's Manual for more details about this feature.

This feature can memorize up to three unique signals to operate remote devices such as garage door openers.


ANTI-GLARE INSIDE (REAR VIEW) MIRROR WITH COMPASS

Refer to sections 2 and 3 in your Owner's Manual for more details about these features.


The anti-glare feature of the inside mirror automatically changes reflection depending on the headlight intensity of the vehicle behind you. This feature is automatically **ON** when the vehicle is started.

To Turn the Anti-Glare Feature **ON** or **OFF**:

For vehicles **with** the HomeLink® feature:

 
- 1 Press the  button on the inside mirror to turn this feature **OFF**. The indicator light will go out.
- 2 Press this button again to turn the feature back **ON**. The indicator light will illuminate.

For vehicles **without** the HomeLink® feature:

- 1 Press and **hold** down the  button on the inside mirror for 3 seconds to turn this feature **OFF**. The indicator light will go out.
- 2 Press and **hold** down this button again for 3 seconds to turn the feature back **ON**. The indicator light will illuminate.

To Display a Compass Reading on the Inside (Rear View) Mirror:

For vehicles **with** the HomeLink® feature:

- 1 Press the  button on the inside mirror to turn this feature **OFF**.
- 2 Press this button again to turn the feature **ON**.

For vehicles **without** the HomeLink® feature:

- 1 Press and **quickly release** the  button on the inside mirror to turn this feature **OFF**.
- 2 Press and **quickly release** this button again to turn the feature back **ON**.

OUTSIDE (SIDE VIEW) POWER MIRRORS

Refer to section 3 in your Owner's Manual for more details about this feature.

To Adjust the Outside (Side View) Mirrors:

- 1 Move the switch to the **LEFT** or **RIGHT** to select the driver-side or passenger-side mirror.
- 2 Push the adjustment switch **UP**, **DOWN**, **LEFT**, or **RIGHT** to adjust the mirror to the desired position.





INSTRUMENT PANEL LAYOUT

Refer to section 2 in your Owner's Manual for more information.

- 1 Headlight Aiming Control Dial
Use to lower headlights when vehicle is loaded.
- 2 Instrument Panel Brightness Control
- 3 Twin Odometer Reset and Trip Knobs
- 4 Headlight, Fog Light and Turn Signal Switch
- 5 Bluetooth® Hands-Free Phone System/Audio Steering Wheel Controls – if so equipped
- 6 Audio Steering Wheel Controls – if so equipped
- 7 Cruise Control Switches
See section 5 in your Owner's Manual for details.
- 8 Intelligent Cruise Control (ICC) Switches – if so equipped
- 9 Windshield Wiper and Washer Switch
- 10 Outside (Side View) Power Mirror Controls
- 11 Lane Departure Warning (LDW) Button – if so equipped
- 12 SNOW Mode ON/OFF Switch
- 13 Vehicle Dynamic Control (VDC OFF) Button
See sections 2 and 5 in your Owner's Manual for details.
- 14 Hood-Release Lever
- 15 Steering Wheel Power Tilt/Telescopic Control
- 16 Front Storage Box and 12-Volt Power Outlet
- 17 Hazard Warning Light Button
- 18 Automatic Transmission Control Lever or Manual Shift Mode
- 19 Heated Front Seat Switches



getting started





FRONT-PASSENGER AIR BAG STATUS LIGHT

Refer to section 1 in your Owner's Manual for detailed information regarding the Infiniti Advanced Air Bag system.

This vehicle is equipped with the Infiniti Advanced Air Bag system. Under some conditions, depending on pressure detected on the passenger seat and how the seat belt is used, the front-passenger air bag is designed to automatically turn **OFF**. When the front-passenger air bag is **OFF**, the front-passenger air bag status light will illuminate*.

For example:

- When the system detects that the front-passenger's seat is occupied by a small adult, child or child restraint as outlined in the Owner's Manual, the  will illuminate to indicate that the front-passenger air bag is **OFF** and **will not inflate in a crash**.
- When the front-passenger's seat is occupied and the passenger meets the conditions outlined in the Owner's Manual, the  will not illuminate to indicate that the front-passenger air bag is **operational**.

***When the system detects that the front-passenger's seat is unoccupied, the passenger air bag status light will not illuminate even though the front-passenger air bag is OFF.**



CRUISE CONTROL

(if so equipped)

Refer to section 5 in your Owner's Manual for more details about this feature.

Steering Wheel Mounted Cruise Controls

- 1 ACCEL/RES COAST/SET Switch
- 2 CANCEL Button
- 3 Cruise ON/OFF Button

To Set Cruise Control:

- 1 Press the **Cruise ON/OFF** button. The **CRUISE** indicator light will illuminate.
- 2 Accelerate to the desired speed.
- 3 Push **DOWN** on the **COAST/SET** switch and release it. The **SET** indicator light will illuminate. Cruise Control should be set to the desired speed.



INTELLIGENT CRUISE CONTROL (ICC)

(if so equipped)

Refer to section 5 in your Owner's Manual for more details about this feature.

Steering Wheel Mounted Cruise Controls

- 1 ACCEL/RES COAST/SET Switch
- 2 CANCEL Button
- 3 ON/OFF Button
- 4 Following Distance Button

The ICC system can be set to one of two cruise modes:

- Vehicle-to-vehicle distance-control cruise
- Conventional fixed-speed cruise.

To Set Vehicle-to-Vehicle Distance-Control Cruise:

- 1 Press the **ON/OFF** button for **less than 1.5 seconds**. The **CRUISE** indicator light will illuminate .
The **set distance** and **set vehicle speed** indicator lights will — also illuminate in **STANDBY** mode .
- 2 Accelerate to the desired speed.
- 3 Push **DOWN** on the **COAST/SET** switch and release it. Cruise Control should be set to the desired speed.
 - When a vehicle **IS NOT** detected ahead of you in the lane, the **set distance** and **set vehicle speed** indicator — lights will illuminate in **SET** mode
 - When a vehicle **IS** detected ahead of you in the lane, **the vehicle ahead detection, set distance, and set vehicle speed** indicator lights will illuminate in **SET** — mode



driving controls

To Set Conventional Fixed-Speed Cruise:

- 1 While Cruise Control is **OFF**, press the **ON/OFF** button and **hold** down for **more than 1.5 seconds**. The **CRUISE** indicator light will illuminate.
- 2 Accelerate to the desired speed.
- 3 Push **DOWN** on the **COAST/SET** switch and release it. The **SET** indicator light will illuminate. Cruise Control should be set to the desired speed.

Note: There are certain conditions under which vehicle-to-vehicle distance-control and/or fixed-speed cruise cannot be set or will automatically cancel. Four such conditions are shown below.

- When rain, snow, or dirt cover the system sensor (located in front bumper opening).
- When the windshield wiper is operated at low or high speed.
- When strong light shines directly on the front of the vehicle (e.g. during sunrise or sunset).
- When the Automatic Transmission is in Manual Shift mode.

Refer to section 5 in your Owner's Manual for more details about this feature.

To Switch Between the Two Cruise Control Modes:





When one of the two cruise modes is in use, you must turn the system **OFF**, and then **ON** again (as instructed above) to select the other Cruise Control mode.





HEADLIGHTS

Refer to section 2 in your Owner's Manual for more details about this feature.

- Parking, tail, license plate, and instrument panel lights **ON** – Turn the headlight switch to .
- Headlights **ON** (all other lights remain **ON**) – Turn the headlight switch to .
- Fog lights **ON** – Turn the headlight switch to . Then, turn the fog light switch to .
- High beam **ON** – Push the lever **FORWARD** (away from you).

AUTOLIGHT (AUTOMATIC HEADLIGHT) SYSTEM OPERATION



(if so equipped)

Refer to section 2 in your Owner's Manual for more details about this feature.

The Autolight (Automatic Headlight) System can automatically:

- Turn the headlights **ON** when it is dark.
- Turn the headlights **OFF** when it is light.
- Keep the headlights **ON** for 30 to 180 seconds after you turn the ignition switch/knob to **OFF** and close all doors. Details on how to adjust this feature, called the Automatic Headlights Off Delay, are provided below.

To activate the Autolight System: Turn the headlight switch to the **AUTO** position.

To deactivate the Autolight System: Turn the headlight switch to the **OFF**, , or  position.

AUTOLIGHT HEADLIGHTS OFF DELAY

To Adjust:

- 1 Press the **SETTING** button.
- 2 Highlight **Vehicle Electronic Systems**, then press ENTER.
- 3 To change the Off Delay time, highlight **Automatic Headlights OFF Delay**, then press ENTER. Adjust using the Infiniti Controller Center Dial or LEFT/RIGHT Main Directional buttons. Press ENTER to set the new **Headlights OFF Delay** time
- 4 For vehicles **with** the Navigation system, press the **MAP** button to return to the Map screen. For vehicles **without** the Navigation system, press any applicable button (e.g. **TRIP, FUEL ECON, DISP, etc.**) to exit the current screen.

SENSITIVITY OF AUTOMATIC HEADLIGHTS TO OUTSIDE LIGHT

To Adjust:

- 1 Press the **SETTING** button.
- 2 Highlight **Vehicle Electronic Systems**, then press ENTER.
- 3 Highlight **Sensitivity of Automatic Headlights**, then press ENTER. Change sensitivity from “Lower” to “Higher” using the Infiniti Controller Center Dial or LEFT/RIGHT Main Directional buttons. Press ENTER to set the new sensitivity adjustment.
- 4 For vehicles **with** the Navigation system, press the **MAP** button to return to the Map screen. For vehicles **without** the Navigation system, press any applicable button (e.g. **TRIP, FUEL ECON, DISP, etc.**) to exit the current screen.

driving controls



FRONT/REAR WIPER/WASHER CONTROLS

Refer to section 2 in your Owner's Manual for more details about this feature.



FRONT WINDSHIELD WIPER

INT

INT (Intermittent)

First, pull the lever **DOWN** one notch.



INT TIME (Speed Sensitive)

Then, rotate the inner knob (**INT TIME**) to the desired speed. Intermittent speed will also be fast or slow depending on vehicle speed.

This feature can be turned **ON** or **OFF**. To adjust the setting: Press the **SETTING** button, highlight **Vehicle Electronic Systems** and press **ENTER**. Highlight **Speed Dependent Wiper** and press **ENTER** to choose between **ON** or **OFF**. Refer to section 4 in your Owner's Manual for more details about this feature. The default Menu setting for this feature is **ON**.

LO

LO Speed – Pull the lever **DOWN** two notches.

HI

HI Speed – Pull the lever **DOWN** three notches.

FRONT WASHER CONTROLS



Washer – Pull the lever **REARWARD** (towards you).

MIST

Mist – Lift the lever **UP** (wipers will swipe one time).



REAR WINDOW

INT

INT (Intermittent)

Twist the outer knob one click (first position). The speed is not adjustable.

ON


ON (Low speed)

Twist the knob two clicks (second position).




Washer – Push the lever **FORWARD** (away from you).


Front Intermittent Wiper

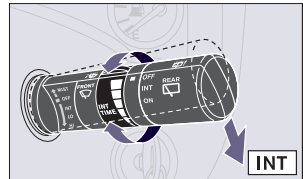


Front Wiper, Low and High Speed

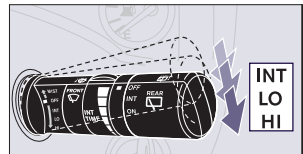

Front Windshield, Washer and Mist

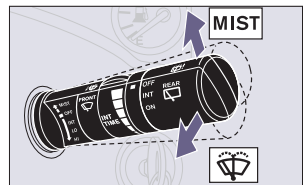

Rear Window Intermittent, Low Speed and Washer

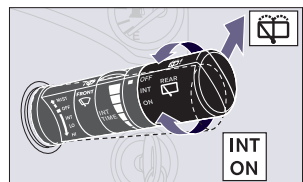




ATTESA E-TSTM ALL-WHEEL DRIVE (AWD)

(if so equipped)

Refer to section 5 in your Owner's Manual for more details about this feature.

The All Wheel Drive (AWD) system is ready and waiting to automatically supply additional traction from the front wheels in various weather conditions.

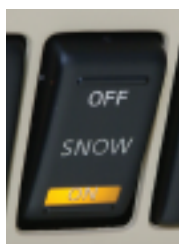

SNOW MODE ON/OFF SWITCH

Refer to section 2 in your Owner's Manual for more details about this feature.

Driver-selectable "Snow Mode" helps improve low speed traction for slick weather conditions.

- Push the dash-mounted "SNOW" switch **ON** for slick road conditions. The indicator light on the switch will illuminate when SNOW mode is **ON**.
- Push the switch **OFF** for all other road conditions.

LANE DEPARTURE WARNING (LDW) BUTTON

(if so equipped)

Refer to sections 2 and 5 in your Owner's Manual for more details about this feature.

When **ON**, the Lane Departure Warning (LDW) system generates visual and audible warnings indicating when your vehicle is about to unintentionally move out of its travel lane where lane markers are detectable.

LDW operates in one of two modes:

- AUTOMATIC MODE, or
- MANUAL (OFF) MODE

AUTOMATIC MODE

LDW is automatically **ON** whenever you start the vehicle. It then activates at vehicle speeds over 45 mph.



To Turn LDW from ON to OFF for One Drive ONLY:

With the LDW button indicator light illuminated **ON**:

- **LDW OFF** – Press the LDW button (the indicator light on the button will go out).
- **LDW ON** – Press the LDW button **again**. The indicator light on the button will illuminate when the system is turned **ON**.

driving controls



MANUAL (OFF) MODE

For your convenience, you may choose to manually override the LDW system so that it doesn't turn **ON** when you start the vehicle. In this Mode, there will be **no** visible or audible warnings when your vehicle is about to move out of its travel lane.

To Change from LDW AUTOMATIC MODE to MANUAL (OFF) MODE:

- 1 Turn the ignition switch/knob to **ON**.*
- 2 Verify the LDW button indicator light **is still illuminated** after the 5 second self-check.
- 3 Press the LDW button one time to turn the LDW button indicator light **OFF**.
- 4 Press and **hold** down the LDW button for approximately **5 seconds** until you hear **five beeps**. The LDW button indicator light should now **go out**.

To Change From LDW MANUAL (OFF) MODE to AUTOMATIC MODE:

- 1 Turn the ignition switch/knob to **ON**.*
- 2 Verify the LDW button indicator light **is not illuminated** after the 5 second self-check.
- 3 Press and **hold** down the LDW button for approximately **5 seconds** until you hear **five beeps**. The LDW system should now be changed to AUTOMATIC mode.

*No matter whether LDW is in MANUAL (OFF) or AUTOMATIC modes, when the ignition is turned to **ON**, a LDW button indicator light self-check occurs, with the LDW button indicator illuminating for 5 seconds.

To Verify Whether the LDW System is in AUTOMATIC or MANUAL (OFF) MODE:

- Turn the ignition switch/knob to the **LOCK** position. Then turn it back to **ON**.

After the initial LDW button indicator light self-check, if the system is:

- In **AUTOMATIC MODE**, the LDW button indicator light **will** be illuminated.
- In **MANUAL (OFF) MODE**, the LDW button indicator light **will not** be illuminated.

REAR VIEW MONITOR

Refer to section 4 in your Owner's Manual for more details about this feature.

When the transmission is in **REVERSE**, the center Display Screen will automatically change to view the area behind the vehicle.

Approximate distance to objects:

Green = 7 and 10 feet

Yellow = 3 feet

Red = 1.5 feet





Driver Temperature Control Button

Passenger Temperature Control Button

HEATER AND AIR CONDITIONER (DUAL-ZONE AUTOMATIC TEMPERATURE CONTROL)

Refer to section 4 in your Owner's Manual for complete Heater and Air Conditioner operation instructions.

Note: The bottom section of the center Display Screen shows a constant display. This display can be changed to show either Heater and Air Conditioning (HVAC) or Audio information, as follows: Press the **SETTING** button and highlight **Display** on the center Display Screen, then press ENTER. Highlight **Lower Display Setting**, and press ENTER to choose between HVAC or Audio.

To Turn Climate Control ON and Set Climate Control to Automatic (AUTO) Mode:

Press the **AUTO** button to turn the system ON. "AUTO" will appear on the center Display Screen and the indicator light on the **AUTO** button will illuminate.



The **AUTO mode** setting can be used year round. It allows the system to self-adjust to constantly maintain a selected temperature (automatic cooling and/or dehumidified heating). Air flow distribution and fan speed are also controlled automatically.

Standard AUTO Mode vs. DUAL Mode

- **Standard AUTO mode** allows the driver to control temperature for self and passenger.
- **DUAL mode** allows the driver and passenger to control their own cabin temperatures.

Press the **DUAL** button to turn DUAL mode **ON** and **OFF**. An indicator light on the **DUAL** button illuminates and the word "Dual" can be seen on the center Display Screen when DUAL Mode is operating. Whenever the **PASSENGER Temperature Control** button is pressed while the system is operating, DUAL mode will also be turned **ON**.



To Change Temperature Settings:

- In **Standard AUTO mode**, press the **DRIVER Temperature Control** button **UP** or **DOWN** to increase or decrease the temperature and set it to the desired level. For normal automatic climate control operation, adjust the temperature to about 75°F.
- In **DUAL mode**, the passenger can press the **PASSENGER Temperature Control** button to adjust their temperature setting, while the driver still controls his/her setting using the **DRIVER Temperature Control** button.

To Control Fan Speed:

- 1 Press the **Fan Speed Control** buttons, + or - to manually adjust fan speed **UP** or **DOWN**. The illuminated fan speed indicator on the center Display Screen will change as fan speed is increased/decreased. The mode will change from AUTO to MANUAL mode ("AUTO" no longer appears on the screen).
- 2 Press the **AUTO** button to return to automatic control of fan speed.



To Turn Climate Control System OFF:

Press the **OFF** button.

To Turn Heat ON:

- 1 Press the **A/C** button until "A/C OFF" is displayed on the center Display Screen and the indicator light on the **A/C** button turns **OFF**.





- Press **UP** or **DOWN** on either the **Driver Temperature Control** button (in Standard mode) or the **Passenger Temperature Control** button (in Dual mode) to increase or decrease cabin temperature.

Note: For optimum system operation, **DO NOT** set the inside cabin temperature lower than the outside air temperature.

To Choose Fresh or Recirculated Air:

Press the **Fresh Air/ Air Recirculation (Intake Air Control)** button to select between:

- **Fresh (outside) air** for cooling/heating/defrosting. The indicator light on the  side of the Intake Air Control button will illuminate when fresh air is selected.
- **Recirculated (inside) air** for maximum A/C cooling performance and to prevent unwanted outside odors from entering the vehicle. The indicator light on the  side of the Intake Air Control button will illuminate when recirculated air is selected.





Notes:

- Recirculated air mode cannot be activated when the system is set to **A/C** and the **Front Defroster** is **ON**.
- Extended use of recirculated air may cause the inside of the windows to fog up.
- While in **AUTO** mode, intake air is also controlled automatically. To manually control intake air while in **AUTO** mode, press the Intake Air Control button. To return to automatic control mode, press and **hold** down the Intake Air Control button for approximately 2 seconds. Both indicator lights on the button will flash twice. Intake air will once again be automatically controlled.

To Manually Change Air Flow:

Press the **MODE** button to select air flow location.

MODE

-  Air flows from center and side vents.
-  Air flows from center and side vents, **plus** foot outlets
-  Air flows mainly from foot outlets.
-  Air flows from the front defroster and foot outlets.

Note: The air flow indicator symbols will illuminate on the center Display Screen.

To Turn Front Defroster ON/OFF:

- Press the **Front Window Defroster** button  to turn it **ON**. The indicator light will illuminate on the Defroster button and the front defrost indicator symbol will illuminate on the center Display Screen.




Notes:

- Pressing the Defrost button provides the best possible defrost action. This is the preferred method for quickly defrosting the window (rather than choosing the front defroster and foot outlets Manual Air Flow control mode, which is less efficient).
- When you press this button, you may hear a click noise from the engine area. This is normal. The Air Conditioner compressor is being activated. With **A/C ON**, moisture is pulled from the air, helping to defrost the inside windows more quickly.

- Press **UP** or **DOWN** on the **Driver Temperature Control** button to set the desired temperature.
- Press the **+ Fan Speed Control** button to set fan speed to maximum.
- Press the **Front Window Defroster** button **again** to turn it **OFF**.

To Turn Rear Defroster ON/OFF:

- Press the **Rear Window Defroster** button  to turn it **ON**. The indicator light will illuminate on the Defroster button and the rear defrost indicator symbol will illuminate on the center Display Screen.
- Press the button **again** to turn it **OFF**. Or, it will turn **OFF** automatically after approximately 15 minutes.





Vehicle equipped with Navigation System Shown.

AUDIO SYSTEM

BOSE® AUDIO SYSTEM WITH FM/AM/IN-DASH, 6-DISC CD/CD-MP3/WMA AUTOCHANGER

Refer to section 4 in your Owner's Manual for complete Audio System operation instructions.

Notes:

- No satellite radio reception is available and no SAT-related information will be displayed when the **RADIO** button is pressed unless an optional satellite receiver and antenna are installed, and an XM® or SIRIUS™ satellite radio service subscription is active.
- The bottom section of the center Display Screen shows a constant display. This display can be changed to show either Audio or Heater and Air Conditioning (HVAC) information, as follows: Press the **SETTING** button and highlight **Display** on the center Display Screen, then press **ENTER**. Highlight **Lower Display Setting**, and press **ENTER** to choose between **Audio** or **HVAC**.

- 1 **Center Display Screen** – Displays various radio, audio CD, CD with MP3/WMA, and rear seat audio/DVD (if so equipped) functions.
- 2 **PRESET A-B-C Button** – Press to change between radio preset banks A, B, and C. A total of 18 stations can be preset for the FM, AM, and, if activated, the SAT band. You can mix radio stations from different bands (AM, FM, or SAT) into any preset bank.
- 3 **RADIO Button** – Activates and displays radio functions. Press to switch between AM, FM, and SAT bands.
- 4 **CD-DVD Button** – Activates and displays audio or MP3/WMA CD and rear seat audio and DVD (if so equipped) functions.
- 5 **DISP Button** – Press to display more detailed information about the audio source (audio CD, CD with MP3/WMA, SAT band) currently playing, such as channel/track/folder name or number, name of the artist, title of the song/folder/track/disc, and other information, if available.

Press the **DISP** button multiple times to change the text displayed while an audio source is playing.

Notes:

- For vehicles **with** the Navigation system, press the **MAP** button to return to the Navigation Map screen.
- For vehicles **without** the Navigation system, press any applicable button (e.g. **TRIP**, **FUEL ECON**, **SETTING**, etc.) to exit the current screen.

6 SEEK Button

Press and release:

- **AM/FM/SAT:** Seeks **BACKWARD**, stopping at the previous broadcasting station.
- **Audio CDs and CDs with MP3/WMA:** Selects the previous track on the CD currently playing.

Note: The first time the **SEEK** button is pressed, the track currently playing will replay from the beginning.

Press and hold down:

- **AM/FM/SAT:** Tunes the radio by moving quickly **BACKWARD** through the stations.
- **Audio CDs and CDs with MP3/WMA:** Skips quickly **BACKWARD** through the track currently playing.

media center

7 TRACK Button

Press and release:

- AM/FM/SAT: Tracks **FORWARD**, stopping at the next broadcasting station.
- Audio CDs and CDs with MP3/WMA: Selects the next track on the CD currently playing.

Press and hold down:

- AM/FM/SAT: Tunes the radio by moving quickly **FORWARD** through the stations.
- Audio CDs and CDs with MP3/WMA: Skips quickly **FORWARD** through the track currently playing.

8 CD Load Button

- Press the button for **less than 1.5 seconds** to load a single CD. You may choose a specific location to load the CD in the 6-Disc CD Autochanger by pressing a Disc Select button (1-6). If no choice of is made within 3 seconds, "INSERT DISC" will appear on the screen to tell you to load the CD in the CD Insert Slot. Location #1 will automatically be selected.
- Press the button for **more than 1.5 seconds** to load up to 6 CDs. "INSERT DISC" will appear on the screen to prompt you to load CDs into the CD Insert Slot, **one-by-one**.

9 CD Insert Slot

10 CD Eject Button

- Press the button for **less than 1.5 seconds** to eject a single CD. You may choose a specific CD to eject by pressing a Disc Select button (1-6). If no choice is made within 3 seconds, the CD currently playing will eject.
- Press the button for **more than 1.5 seconds** to eject all CDs stored in the CD Autochanger. The CDs will eject **one-by-one**, and the screen will display which CD Location number is being ejected.

11 PAUSE-MUTE Button (for vehicles **without** the Infiniti Navigation system)

Press  to pause CD play or mute radio play.

12 RPT-RDM Button

Audio CDs and CDs with MP3/WMA: The play pattern of the CD can be changed to repeat play of 1 disc (CD), repeat play of 1 track and/or folder, or play all discs/folders or 1 disc/folder in random order.

13 SCAN Button

AM/FM/SAT: Press to scan stations, stopping at each broadcast station for 5 seconds. Press again to stop at a chosen station.

Audio CD or CDs with MP3/WMA: Plays the beginning 10 seconds of each of the tracks for CDs loaded in the player, moving through all CD tracks in sequence.

Press again during the 10 second period to stop at a chosen track and play it in its entirety.

14 Station Preset/Disc Select Buttons (1-6)

AM/FM/SAT: Use to select radio preset stations.

CD: Use to select which CD to play.

15 VOLUME-PUSH/POWER Knob:

- Push to turn the audio system **ON/OFF**.
- Turn to adjust volume level.

16 TUNE/CAT/FOLDER-PUSH/AUDIO Knob:

- Turn to manually tune radio stations **UP** or **DOWN** (e.g. tune from 105.1 to 105.3 FM).
- Turn to select different MP3/WMA folders if a CD with MP3/WMA is in the CD Changer.
- Push to display, then turn to adjust: BASS, TREBLE, FADE, BALANCE, and SSV (Speed Sensitive Volume).

HOW TO CUSTOMIZE YOUR RADIO PRESETS

With the PRESET A-B-C button, you can program up to 18 radio stations (AM, FM, and SAT*) into 3 separate preset memory banks—6 stations for each PRESET bank.

- 1 Press the **PRESET A-B-C** button to select bank A, B, or C.
Note: The PRESET A, B, or C indicator will illuminate on the Center Display screen to show which bank is activated.
- 2 Press the **RADIO** button to select AM, FM, or SAT* band.
- 3 Tune to the desired station using the **SEEK** or **TRACK** button or the **TUNE/CAT/FOLDER-PUSH/AUDIO** knob.
- 4 Press and **hold** down the desired **Station Preset/Disc Select** button (1 through 6) until you hear a “beep” sound.
- 5 Repeat the above steps to program up to 18 stations.

Note: AM, FM, and SAT* stations can be mixed within any of the A, B, or C preset banks.

*Only available if an optional satellite receiver and antenna are installed, and an XM® or SIRIUS™ satellite radio service subscription is active.



HOW TO CUSTOMIZE YOUR TONE SETTINGS

BASS, TREBLE, FADE, BALANCE, SSV (Speed Sensitive Volume)

- 1 Press the **TUNE/ CAT/FOLDER-PUSH/AUDIO** knob until the desired mode appears on the center Display Screen.
- 2 Turn the knob to adjust the setting.



AUDIO SYSTEM SPECIAL FEATURES

SSV (Speed Sensitive Volume)

- 1 Press the **TUNE/ CAT/FOLDER-PUSH/AUDIO** knob to access the SSV adjustment mode.
- 2 Turn the knob **LEFT** or **RIGHT** to select OFF, LOW, MID (Midrange), or HIGH.

RDS (Radio Data System)

This is a data information service transmitted by some radio stations on the FM (not AM) and/or SAT band encoded within a regular radio broadcast. It can display the

following:

- Station Name/Call sign (e.g. “Cool Jazz”/KKJZ 88.1).
- Music or programming type (e.g. Jazz or Rock).
- Name of the Artist/Song title.

If the station you are listening to is broadcasting **RDS** information, “**RDS ST**” will be displayed above the station number or name on the center Display Screen.



media center

DISP (Display) Button

Displays audio-related information transmitted by some channels encoded within a regular SAT band broadcast on the center Display Screen. For example: Channel Name/Call Sign/Artist/Song Title may be shown.

In addition, when audio CDs or CDs with MP3/WMA are playing and are programmed with Disc/Folder/Track Titles or the Artist's Name, this information can be displayed by pressing the **DISP** button multiple times.




Notes:

- For vehicles **with** the Navigation system, press the **MAP** button to return to the Navigation Map screen.
- For vehicles **without** the Navigation system, press any applicable button (e.g. **TRIP, FUEL ECON, SETTING, etc.**) to exit the current screen.

INFINITI CD/DVD MOBILE ENTERTAINMENT SYSTEM

(if so equipped)

Refer to section 4 in your Owner's Manual for complete Mobile Entertainment System operation instructions.

- With a flip-down LCD Display Screen, two wireless headphones with ON/OFF switches and volume control dials, and a wireless remote control, this system allows rear-passengers to listen to CDs, watch DVD movies, and play video games while on the road.
- The CD/DVD player is located on the rear side of the front Center Console. Auxiliary input jacks (located on the CD/DVD player face plate) may be used with compatible devices such as video game systems, portable digital players, camcorders, and other portable video devices.
- You can listen to CD/DVD audio through all of the vehicle's speakers, or through the headphones.
- Use the CD-DVD button  , located on the front audio system panel, for listening to the rear CD/DVD audio through the vehicle's speakers, or through the headphones.



Notes:

- When a CD/DVD is initially loaded in the rear entertainment system and played, the audio portion is heard through the vehicle's speakers. Occupants in the front seats can choose to continue to listen to the CD or DVD audio, or, by pressing the CD-DVD button, they can listen to a CD loaded in the front CD player, or tune to a radio station independent of the rear passengers.
- When a front passenger "overrides" the rear audio speaker play function as noted above, rear seat passengers can use their wireless headphones to listen to the rear CD or DVD audio and/or watch the DVD on the rear LCD Display Screen.





BLUETOOTH® HANDS-FREE PHONE SYSTEM

Refer to section 4 in your Owner's Manual and www.infiniti.com/bluetooth for complete Bluetooth® Hands-Free Phone System operation instructions and compatible phone list.

With an overhead microphone and sound transmitted through the audio system speaker, the Bluetooth® Hands-Free Phone System utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.

System Operating Tips:

- Close all windows. Surrounding noises may interfere with system operation.
- Press the  **button** on the steering wheel to initiate a Bluetooth® Voice Recognition session.
- Wait for the tone before speaking.
- Start speaking a command within 5 seconds after the tone sounds.
- To go back to the previous command, say "Go back" or "Correction."
- To cancel a Bluetooth® voice recognition session, say "Cancel" or "Quit," or press the  **button**.
- To increase or decrease the volume of the voice prompts, press the **VOL (Volume) Control switch** on the steering wheel or turn the audio **Volume-Push/Power knob** while the system is responding.
- Speak in a clear and natural voice without pausing between words.

Pairing Your Phone

Before you can use the hands-free feature, you will need to set-up, or *pair*, the system to recognize your cellular phone(s). Up to 5 Bluetooth®-enabled phones can be paired to this system. After the initial one-time set-up, the system will automatically connect upon start-up as long as your phone is in range and available.


The pairing procedure for cellular phones varies according to each manufacturer. For a list of compatible phones and detailed pairing instructions, please visit www.infiniti.com/bluetooth.




media center

SETTING UP YOUR PHONE BOOK – ADDING NEW ENTRIES

Each paired phone has its own dedicated phone book. Each phone book can store up to 40 voicetags (voice-activated dialing). Each voicetag can have up to 4 locations/phone numbers: Home, Office, Mobile, and Other.



- 1 Press the  button.
- 2 Say "**Phone Book**"
- 3 When prompted, say "**New Entry.**"
- 4 When prompted, say the name you would like to give the new entry. For example, say "**Michelle.**" If the name is too short or too long, or if it sounds too much like a name that is already stored in the phone book, the system will tell you and prompt you to say a name again. Modify the name and say it again.
- 5 When the system accepts the name, you will be asked to confirm it as correct.
- 6 The system will ask for a location (**Home, Office, Mobile, or Other**). Select and say a location. The system will acknowledge the location.
- 7 When prompted, say the phone number. For example, say "**five five five one two one two.**" The system will repeat the phone number and prompt you for the next command.
- 8 When you have finished entering the phone number, say "**Store.**" The system will confirm the name, location, and phone number.
- 9 The system will then ask if you would like to store another location for the same name. Say "**Yes**" or "**No.**" If you do not respond to the system prompt, the system will end the New Entry session.

MAKING A PHONE CALL


- 1 Press the  button.
- 2 After the tone, do one of the following:
 - Say "Call [voicetag & location]." For example, say "Call **Michelle Home.**"
 - Say "Call [phone number]." For example, say "Call **123 456 7891.**"
 - Say "**Redial**" to redial the previous phone number called by the system.

RECEIVING A PHONE CALL

When you receive a phone call, a ring tone will sound through the audio system.

To **accept the call**, press the  button.
To **reject the call**, press the  button.

ENDING A PHONE CALL

To "**hang up**" your phone at the end of a call or to disconnect during call placement, press the  button.



INFINITI NAVIGATION SYSTEM


Refer to section 4 in your Owner's Manual and your separate 2006 Infiniti Navigation System Owner's Manual for complete Navigation system operation instructions.

- 1 **CENTER DISPLAY SCREEN** – Displays Navigation menus and Map.
- 2 **DEST (Destination) Button** – Displays the address book and alternative ways to program a destination (e.g. Street Address, Previous Destinations, Points of Interest, etc.).
- 3 **MAP Button** – Displays the Navigation Map.
- 4 **ROUTE Button** – Displays route guidance control functions.
- 5 **DAY/NIGHT/OFF/BRIGHTNESS Button** – Use to switch the center Display Screen between **day view** and **night view**. Or, within approximately 10 seconds of pressing, you can adjust the center Display Screen brightness **UP** or **DOWN** by turning the Infiniti Controller Center Dial or pressing the Left/Right Main Directional buttons. Press and **hold** down to turn the display **OFF** entirely. To resume display, press the **SETTING** button and highlight **Display**, then press **ENTER**. Highlight **Display Off** and press **ENTER** to turn the indicator light **OFF**. Press the **BACK** button two times to return to the main display screen.
- 6 **SETTING Button** – Use to set Navigation preferences.
- 7 **ENTER Buttons** – Use to select menu items highlighted on the center Display Screen.
- 8 **Center Dial** – Turn the dial to navigate **UP**, **DOWN**, and **ACROSS** the center Display Screen.
- 9 **Main Directional Buttons** – Press to navigate **UP**, **DOWN**, and **ACROSS** the center Display Screen.
- 10 **Additional Directional Buttons** – Depending on which Map is displayed (Plan View or Birdview™), use these buttons to make “fine tuned” movements around the center Display Screen.
- 11 **BACK (Previous) Button** – Press to return to the previous function shown on the center Display Screen, and to delete characters when using the on-screen keyboard.
- 12 **VOICE Button** – Press to hear the next Navigation instruction.
- 13 **ZOOM OUT Button** – Increases the Map view, showing more area.
- 14 **ZOOM IN Button** – Decreases the Map view, showing greater detail.

navigation

STORING YOUR HOME (AND OTHER ADDRESSES) IN YOUR ADDRESS BOOK

- 1 Press the **DEST** button.
- 2 Highlight **Address Book**, then press ENTER.
- 3 Highlight **Home Location (Add New)**, then press ENTER.
- 4 A confirmation message will appear, reading "Home location not stored. Store now?" Highlight **Yes**, then press ENTER.
- 5 Highlight **Street Address**, then press ENTER.
- 6 Input the House Number by highlighting each character and pressing ENTER.
- 7 Once complete, highlight **OK** and press ENTER.
- 8 Input the Street Name by highlighting each character and pressing ENTER. To insert a space, highlight **█** and press ENTER.
- 9 Once complete, highlight **OK** and press ENTER.
- 10 Highlight the **correct street and city** from the list, then press ENTER.
- 11 Press ENTER again. "Home location stored" will appear on screen.
- 12 Press the **MAP** button to return to the Map screen.

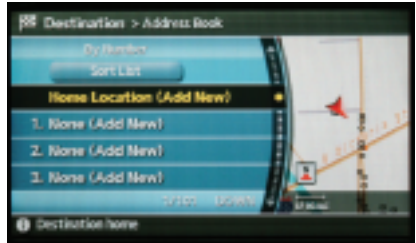

Notes:


- You can store other addresses by repeating the steps above. In step 3, highlight **None (Add New)**, then press ENTER.
- In step 5, you may also choose alternate ways to store an address, including **Map** and **Previous Destinations**. Refer to your 2006 Infiniti Navigation System Owner's Manual for more information.
- A unique sound (e.g. a chime, a dog bark, etc.) can be "attached" to your Home or Other Addresses in your Address Book. If a sound is attached to an Address Book entry, whenever you approach that location, the sound will be heard. Refer to section 6, **Storing a location/route/MINOR ADJUSTMENT OF THE STORED HOME AND LOCATIONS** in your 2006 Infiniti Navigation System Owner's Manual for more information.

DELETING YOUR HOME (OR OTHER ADDRESSES) IN YOUR ADDRESS BOOK

- 1 Press the **SETTING** button.
- 2 Highlight **Navigation**, then press ENTER.
- 3 Highlight **Address Book**, then press ENTER.
- 4 Highlight **Stored Location**, then press ENTER.
- 5 Highlight **Home Location** or **another stored location** in the address book list, then press ENTER.
- 6 Highlight **Delete**, then press ENTER.
- 7 "Delete home location?" or "Delete stored location?" will appear on screen.
- 8 Highlight **Yes**, then press ENTER.
- 9 Press the **MAP** button to return to the Map screen.

TURNING VOICE GUIDANCE ON/OFF AND ADJUSTING VOLUME

- 1 Press the **SETTING** button.
- 2 Highlight **Guidance Voice**.
- 3 Press ENTER to select **ON** or **OFF**. The indicator light will illuminate **ON** when Voice Guidance is **ON**.
- 4 To adjust the volume, highlight **Guidance Volume** and press ENTER. Then turn the Infiniti Controller Center Dial or press the Left/Right Main Directional buttons.
- 5 Press the **MAP** button to return to the Map screen.

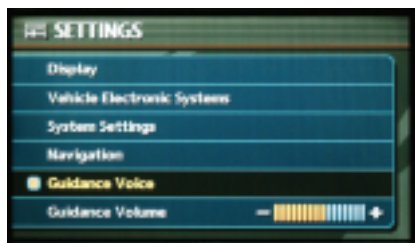

WHERE AM I?

- 1 Press the **ROUTE** button.
- 2 Highlight **Route Information**, then press ENTER.
- 3 Highlight **Where am I?**, then press ENTER. The names of the next, current, and previous street will display.
- 4 Press the **MAP** button to return to the Map screen.



STORE CURRENT LOCATION

You can store the current physical location of your vehicle in your address book.

- 1 While the Map screen is displayed, press ENTER.
- 2 Highlight **Store Location**, then press ENTER.
- 3 A confirmation message will appear, confirming that the location has been stored to your address book. The location will be stored in the first available position in your address book.
- 4 Press the **MAP** button to return to the Map screen.

PROGRAMMING A DESTINATION

There are several methods you can use to program your Navigation System to guide you to a desired destination point. Shown below and on page30 are three of the most common destination programming methods.

Refer to section 4, **Setting a destination** in your 2006 Infiniti Navigation System Owner's Manual for additional available methods.

Note: The vehicle must be stationary before performing destination programming.

PROGRAMMING A DESTINATION – STREET ADDRESS

- 1 Press the **DEST** button.
- 2 Highlight **Street Address**, then press ENTER.
- 3 Input the House Number by highlighting each character and pressing ENTER.
- 4 Once complete, highlight **OK** and press ENTER.
- 5 Input the Street Name by highlighting each character and pressing ENTER. To insert a space, highlight **█** and press ENTER.
- 6 Once complete, highlight **OK** and press ENTER.
- 7 Highlight the **correct street and city** from the list, then press ENTER.
- 8 Highlight **OK**, then press ENTER to set the destination and calculate the route.
- 9 Highlight **Start**, then press ENTER to begin route guidance.




Note: **More Routes**, **Route Info.**, and **Add Way Pt.** are options available in addition to **Start**. Refer to your 2006 Infiniti Navigation System Owner's Manual for more information.

navigation

PROGRAMMING A DESTINATION – POINTS OF INTEREST (POI)

- 1 Press the **DEST** button.
- 2 Highlight **Points of Interest (POI)**, then press ENTER.
- 3 Highlight a **main category** * (e.g. Restaurant, Shopping, Travel, etc.), then press ENTER.

Note: In this step you can also search for Points of Interest by Name. Refer to your 2006 Infiniti Navigation System Owner's Manual for more information.

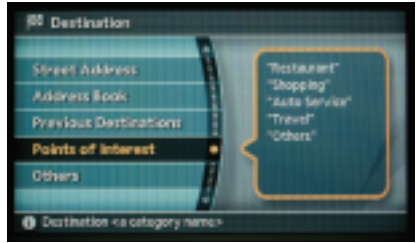

- 4 Highlight **Nearby POI**, then press ENTER.
- 5 Highlight the **desired selection** from the list, then press ENTER.
- 6 Highlight **OK**, then press ENTER.
- 7 Highlight **Start**, then press ENTER.

Note: **More Routes**, **Route Info.**, and **Add Way Pt.** are options available in addition to **Start**. Refer to your 2006 Infiniti Navigation System Owner's Manual for more information.

* Depending on the main category you highlight, you may have the option to make additional subcategory selections. For example:

- Highlighting **Restaurant** allows you the additional option to highlight a specific cuisine choice, such as **Italian** or **Chinese**.
- Highlighting **Travel** allows you the additional option to highlight **Airport**, **Automobile Club**, **Tourist Attraction**, etc. If **Hotel** is highlighted, another list of specific hotel chain names is provided from which you can choose.

For a comprehensive **Category List**, refer to section 4, **Setting a destination** in your 2006 Infiniti Navigation System Owner's Manual.

PROGRAMMING A DESTINATION – NEARBY PLACES

- 1 Press the **DEST** button.
- 2 Highlight **Others**, then press ENTER.
- 3 Highlight **Nearby Places**, then press ENTER.
- 4 Highlight a **category** (e.g. Restaurant, Gas Station, Hotel, etc.), then press ENTER.

Note: Depending on the category, you may be prompted to make additional selections.

- 5 Highlight the **desired selection** from the list, then press ENTER.
- 6 Select **Start**, then press ENTER.

Note: **More Routes**, **Route Info.**, and **Add Way Pt.** are options available in addition to **Start**. Refer to your 2006 Infiniti Navigation System Owner's Manual for more information.



DELETING A ROUTE

After a destination is set in the Navigation System and a route has been plotted, you may want to delete the route while driving.

- 1 Press the **ROUTE** button.
- 2 Highlight **Cancel Route Guidance**, then press ENTER.
- 3 "Cancel current route?" will appear on screen.
- 4 Highlight **Yes**, then press ENTER.

FRONT ARMREST/CENTER CONSOLE STORAGE BOX

Refer to sections 1 and 2 in your Owner's Manual for more details about this feature.

- 1 **Top** button – Press to open the top storage bin.
- 2 **Middle** button – Press to slide the armrest **FORWARD** and **BACKWARD**.
- 3 **Bottom** lever – Pull **UP** to open the bottom storage bin.

Inside you will find the following convenient features:

- 12-Volt Power Outlet
- Pass-through for a cell phone charger cord
- Top and bottom storage bins/slots



12-VOLT POWER OUTLETS

Refer to section 2 in your Owner's Manual for more details about these features.

Four 12-Volt Power Outlets are available in your vehicle:

- Center Dash Outlet (located under the Analog Clock)
- Front Storage Box Outlet
- Rear Seat Outlet
- Luggage Area Outlet (located on the left side)



OPEN/CLOSE LIFT GATE (BACK DOOR/REAR HATCH)

Refer to section 3 in your Owner's Manual for more details about these features.

Lift Gate Electronic Release Button

- 1 Unlock all vehicle doors (including the lift gate) by pressing the **UNLOCK** button on the Keyfob/Intelligent Key or either power door lock switch **two times**.
- 2 Press the Lift Gate Electronic Release button (located under the rear Infiniti symbol) to release the lift gate.
- 3 Use the handle to pull the door completely open.



Lift Gate Handle Request Switch

For vehicles equipped **with** the Intelligent Key system you can also unlock the lift gate by pushing the Lift Gate Handle Request Switch.

Note: The Intelligent Key must be on "your person" to unlock the lift gate with the Lift Gate Handle Request Switch.


Closing Assist

When the lift gate is pulled down to an almost closed position, it will automatically pull itself to the completely closed position.

convenience

SPARE TIRE COVER

Refer to section 6, **Getting the spare tire and tools** in your Owner's Manual for more details about this feature.

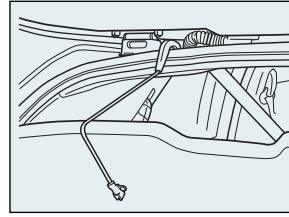

REAR CENTER SEAT BELT TONGUE/BUCKLE – SELECTING THE CORRECT SEAT BELT BUCKLE WHEN FASTENING

Refer to section 1 in your Owner's Manual for more details about this feature.

The rear center seat belt tongue can **ONLY** be fastened into the **center** seat belt buckle. The center seat belt buckle has “**CENTER**” printed on it.



REAR CENTER SEAT BELT STORAGE

Refer to section 1 in your Owner's Manual for more details about this feature.

- 1 Use the **metal** ignition key to release the connector buckle.
- 2 Retract the seat belt up to the retractor base (located in the rear ceiling storage area).
- 3 Fold the seat belt tongue against the seat belt so that it will lay flat.
- 4 Secure the connector tongue into the retractor base.



REAR SEAT ADJUSTMENT

Refer to section 1 in your Owner's Manual for more details about this feature.


- 1 Pull **UP** on the adjustment lever.
- 2 Adjust the seatback to the desired position, then release the lever.



REAR SEATS FOLD DOWN

Refer to section 1 in your Owner's Manual for more details about this feature.

- 1 Remove the head restraints from the rear seats.
- 2 Position the left and right rear seat belts to the side.
- 3 Stow the rear center seat belt in the rear ceiling storage area.
- 4 Remove the cargo cover (if so equipped).
- 5 To fold the rear seats flat, pull either:
 - the reclining levers (left side and right side) in the center area of the rear seats, **OR**
 - the levers (left side and right side) in the luggage area (rear hatch).

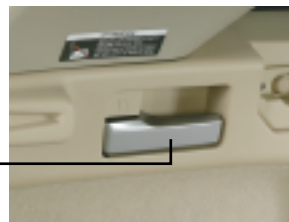

Note: When resetting the rear seats, be sure to re-install the head restraints.



All illustrations, photographs and specifications in this guide are based on the latest product information; some vehicle parts cannot be shown in certain photographs. Some vehicles are shown with optional equipment. See actual vehicles for complete accuracy. Infiniti Division of Nissan North America, Inc. reserves the right to make changes at any time, without notice, in prices, colors, materials, equipment, specifications and models, and to discontinue models or equipment. Availability and delivery time for particular models and equipment combinations may vary. For information on availability, additional options or accessories, contact your Infiniti dealer. All specifications, options and accessories shown in this guide apply to the 49 continental states. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. INFINITI, the Infiniti logo, and INFINITI model names are Nissan trademarks.